


NOSTALGIE RANGE COOKERS

UP30 - UP36 - UPD40 - UP48 - UP60

UPI304 - UPI366 - UPDI406 - UPI486

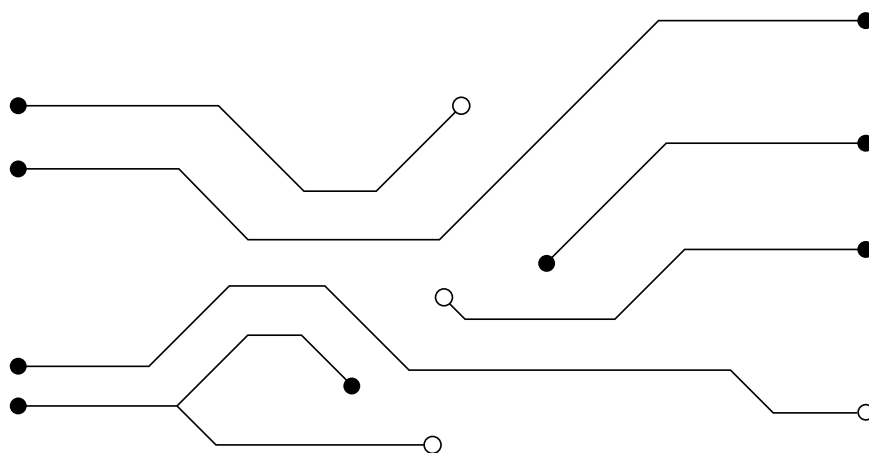

Wiring diagrams


Wiring diagrams

00	Black
11	Brown
22	Red
33	White
44	Yellow
45	Yellow-green
55	Grey
66	Blue
AA	Electrical ignition transformer
C	Commutator
CCDF	Fry-Top switch
CP	Cooking probe
DS1	Burner control
DU	Wax thermal actuator discharging steam
DY	Display
EL	Solenoid valve
EN	Encoder
F	Phase
F1	Phase 1
K1	Earth wire terminal block
K2	Earth wire lower resistance
K3	Earth wire oven fan
K4	Earth wire circulating resistance
K5	Earth wire upper resistance
K6	Earth wire oven light 1
K7	Earth wire oven light 2
K8	Earth wire roaster
K9	Earth wire cooling fan.
K10	Earth wire commutator
K11	Earth wire oven thermostat
K12	Earth wire programmer/timer
K13	Earth wire grill resistance
K14	Earth wire piastra elettrica
K15	Earth wire frame
K16	Earth wire barbecue resistance
K17	Earth wire resistenza friggitrice
L1	Oven light
L2	Oven light
M	Terminal block
MA	Electrical ignition microswitch
MD	Grill microswitch


MG	Rotisserie
MP	Door microswitch
MT	Micro cooling fan
N	Neutral
NTC	Temperature probe
P	Timer\Clock - Timer\Programmer
PB	Power board
PE	Electric hotplate
PT1000	Temperature probe
R1	Upper resistance
R2	Lower resistance
R3	Grill resistance
R4	Circulating resistance
R5	Barbecue resistance
R6	Fryer resistance
RE	Energy controller
RL	Limit resistance
S1	Oven warning light
S2	Mains power warning light
S3	Grill warning light
S4	Cooling fan warning
S5	Barbecue warning light
S6	Electric hotplate warning light
S7	Rotisserie warning light
S8	Residual heat warning light
S9	Fryer warning light
SA	Power supply board
SD	Display board
SE	Auxiliary power board
SI	Interface board
SP	Power board
SR	Safety Relay
SWD	Warming drawer control board
T	Grill thermostat
TF	Oven thermostat
TR	Fryer thermostat
TS\TS1	Safety thermostat
TST	Tangential motor safety thermostat
TT	Tangential thermostat
V\VR	Oven fan
VT	Cooler fan

Wiring diagrams

4 INDUCTION ZONES

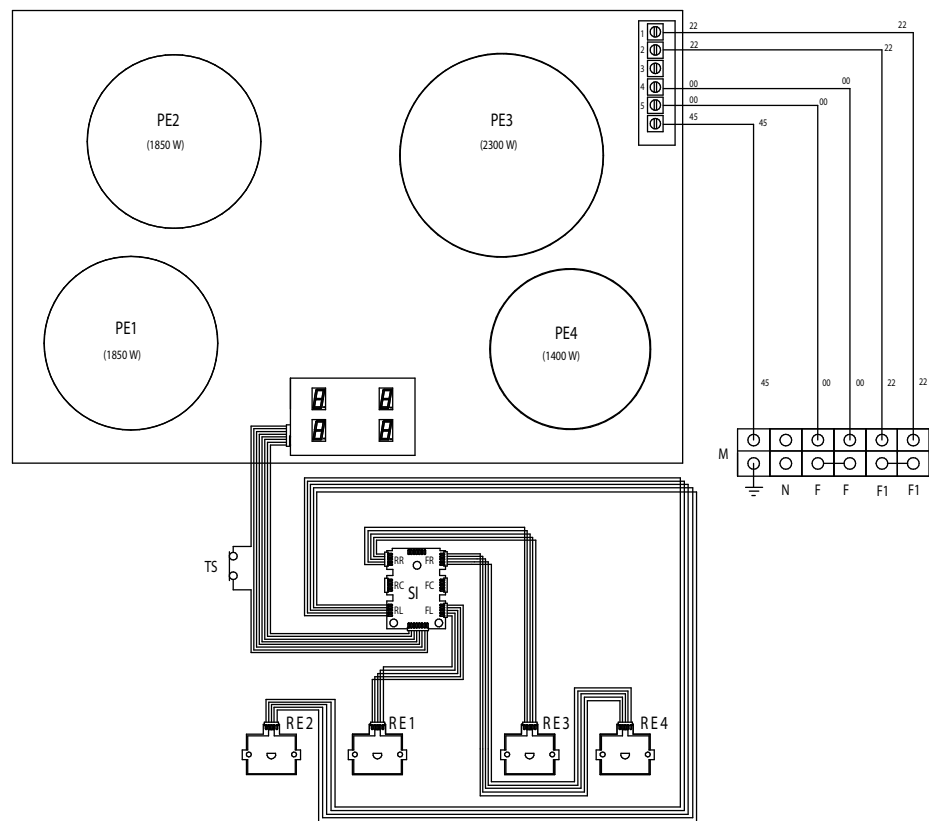


6 INDUCTION ZONES

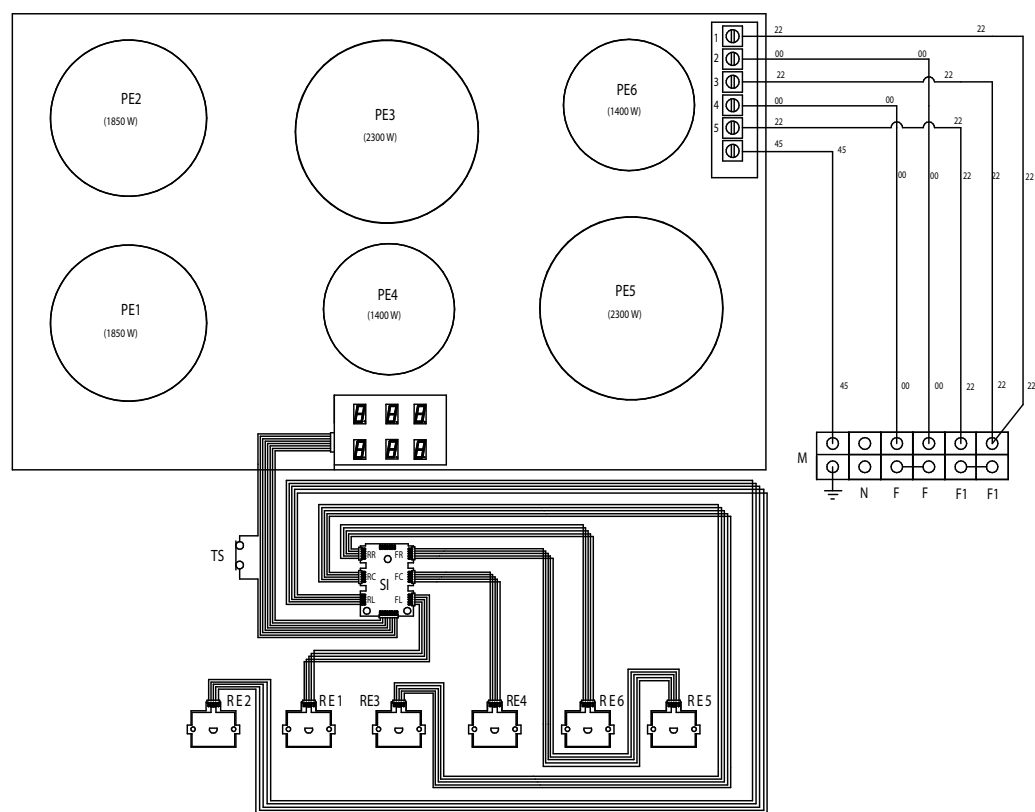


Wiring diagrams

U (P/N) 30 MP - U (P/N) I 30 MP

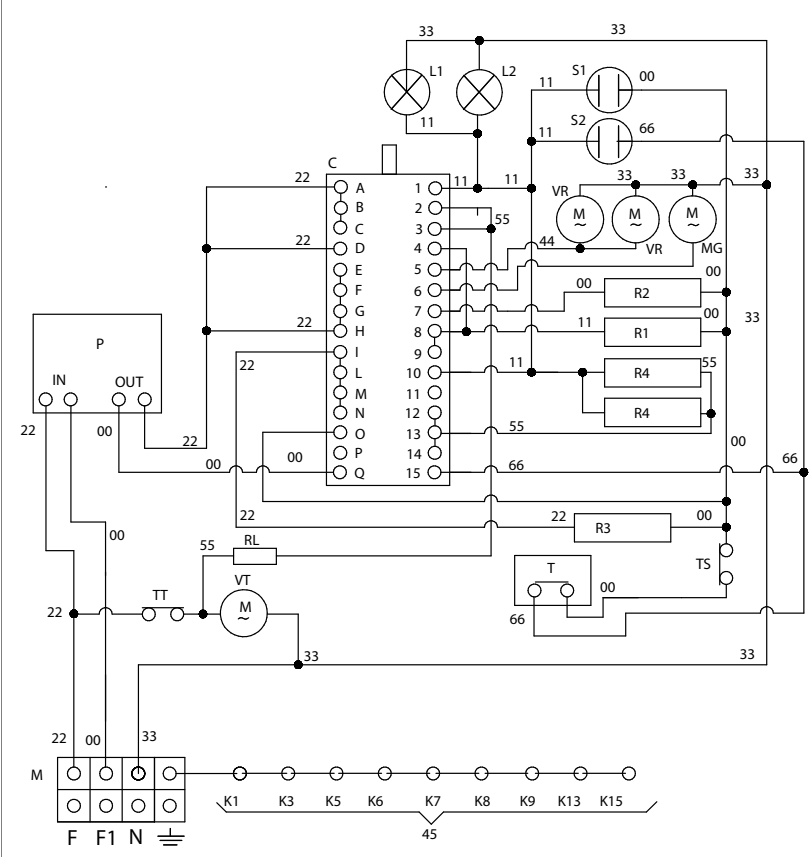


U(P/N) 36MP - U(P-N) 361MP - U(P/N) I 36MP - U(P-N) I 361MP

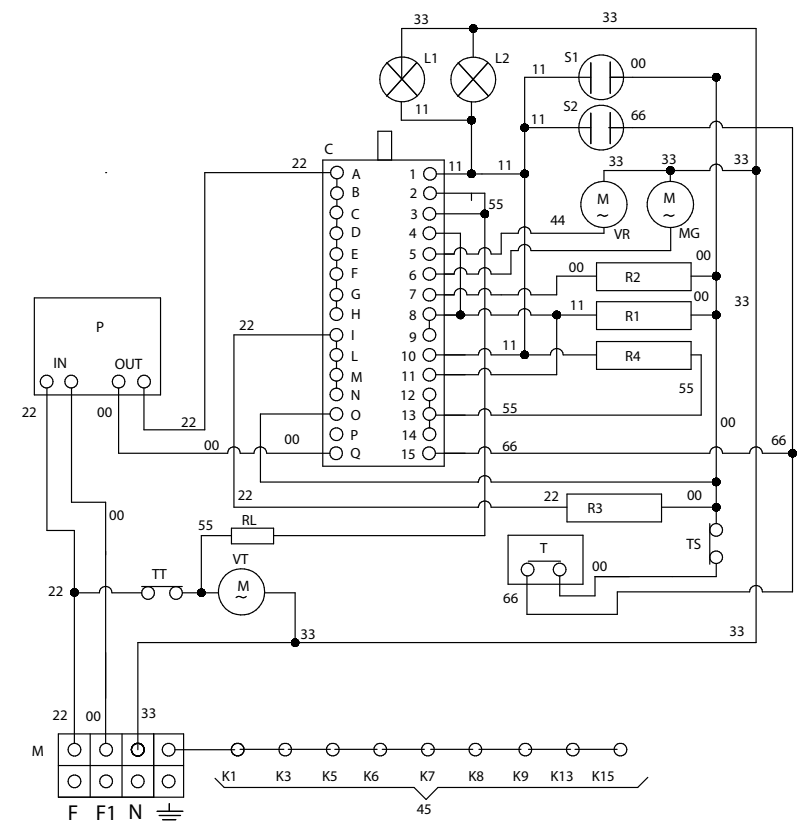


Wiring diagrams

U (P/N) 48 MP - U (P/N) I 48 MP

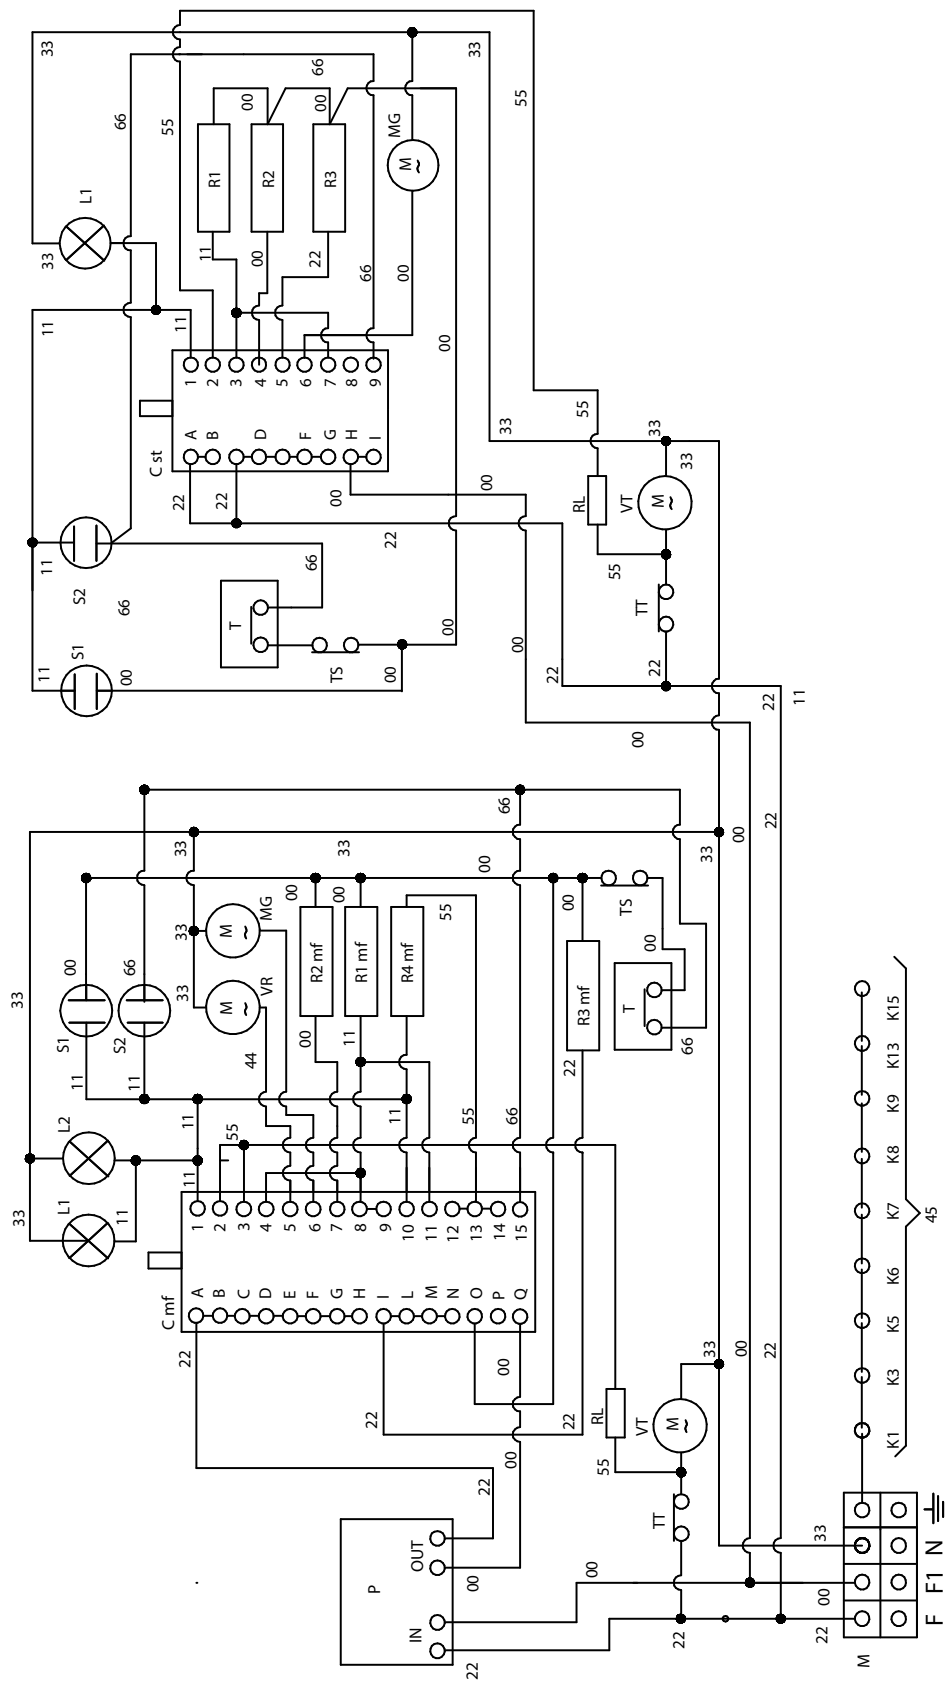


Wiring diagrams

U (P/N) 48 S MP

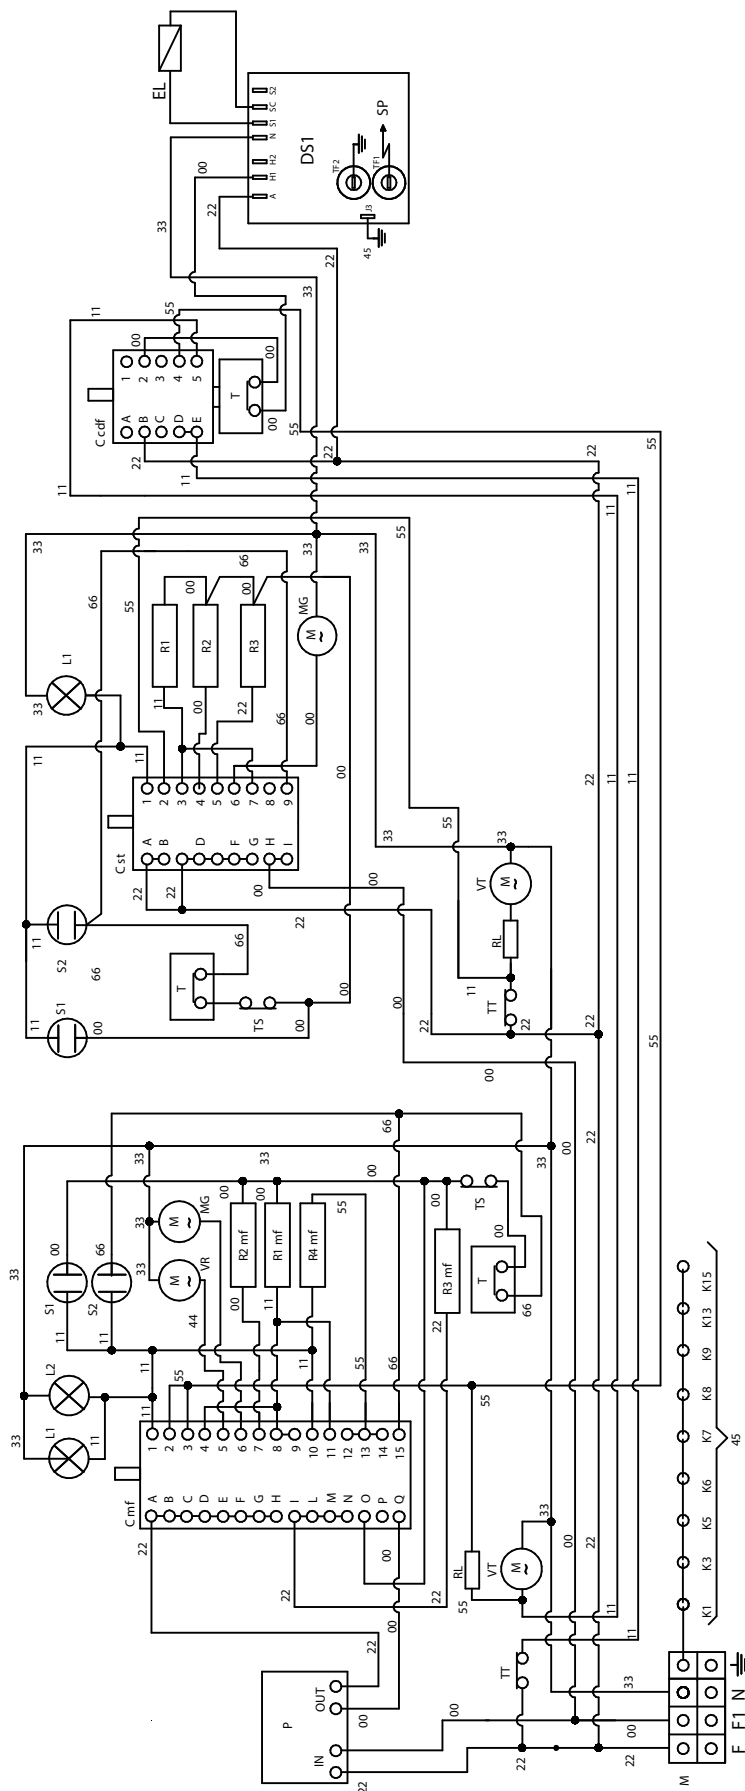


Wiring diagrams

U (P/N) 60 MP

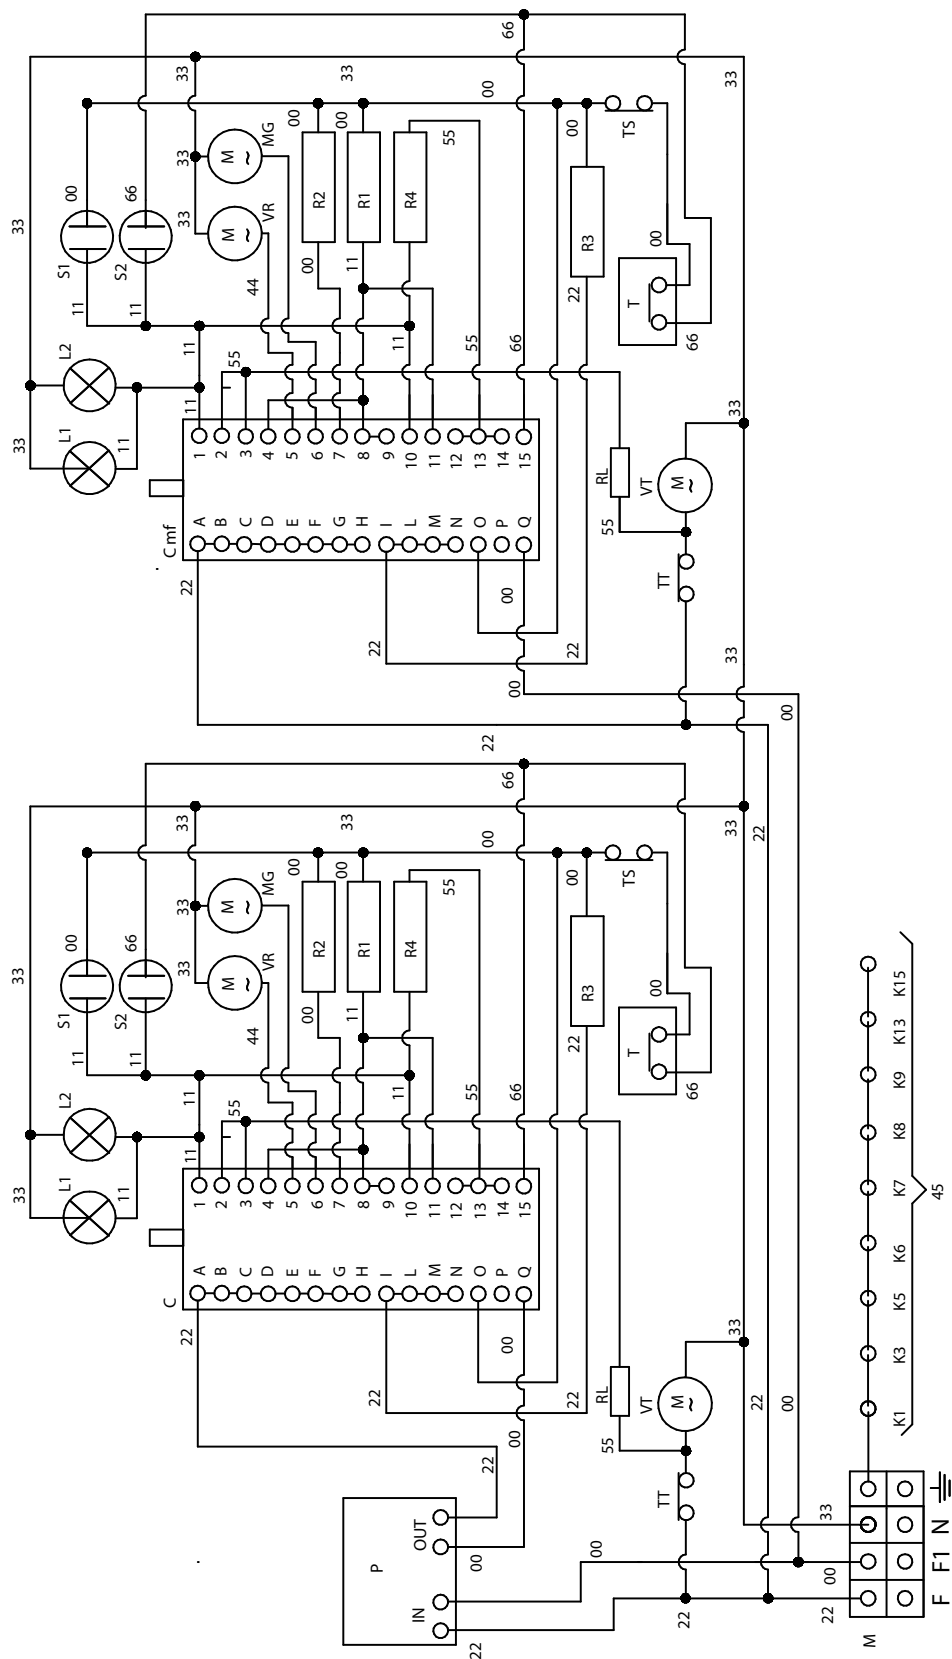


Wiring diagrams

U (P/N) 60 S MP

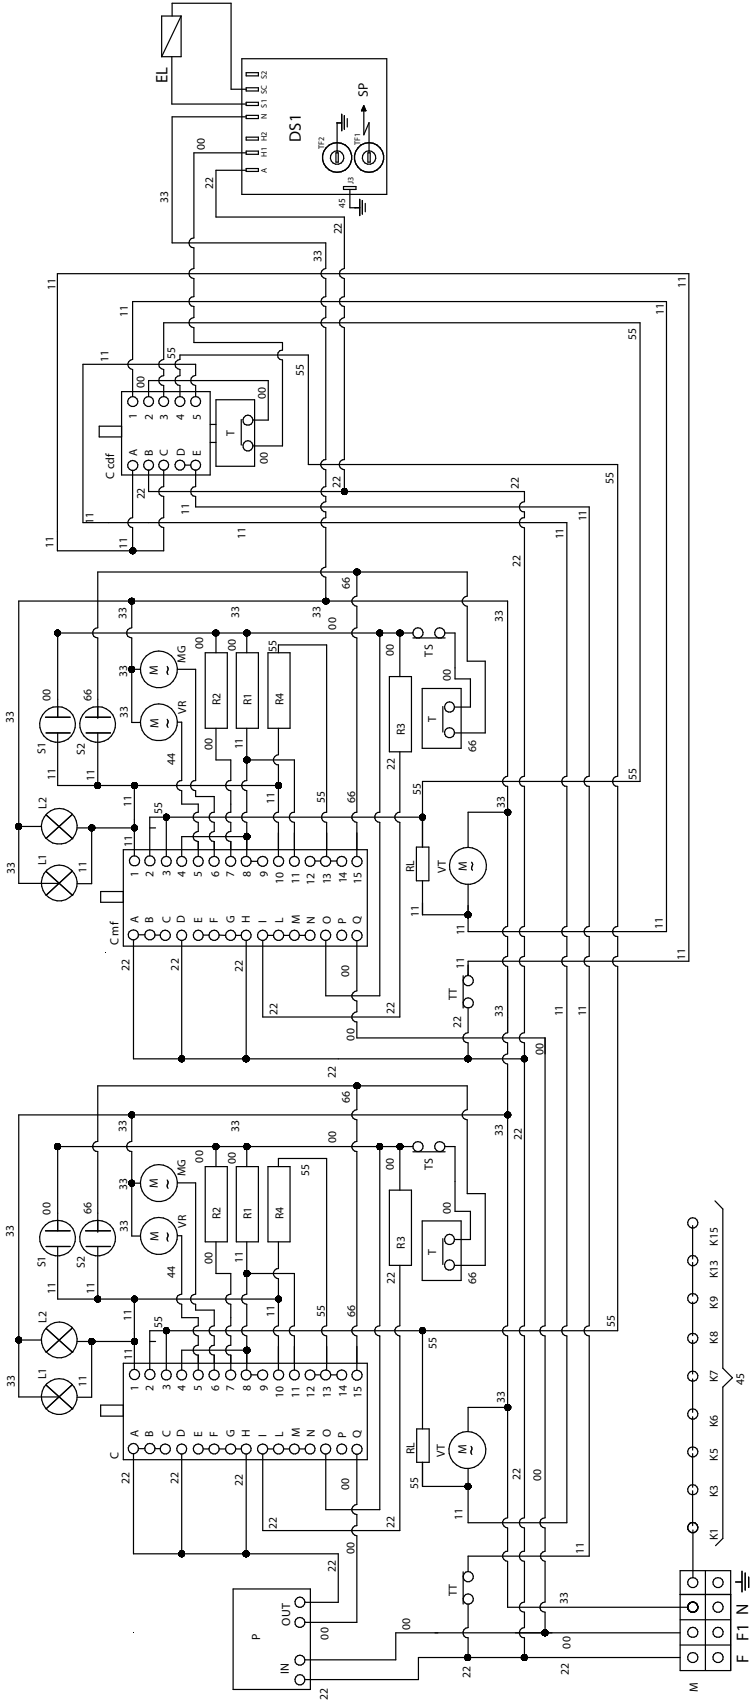

Wiring diagrams

U (P/N) D 36 MP - U (P/N) D I 36 MP - U (P/N) D 40 MP - U (P/N) D I 40 MP

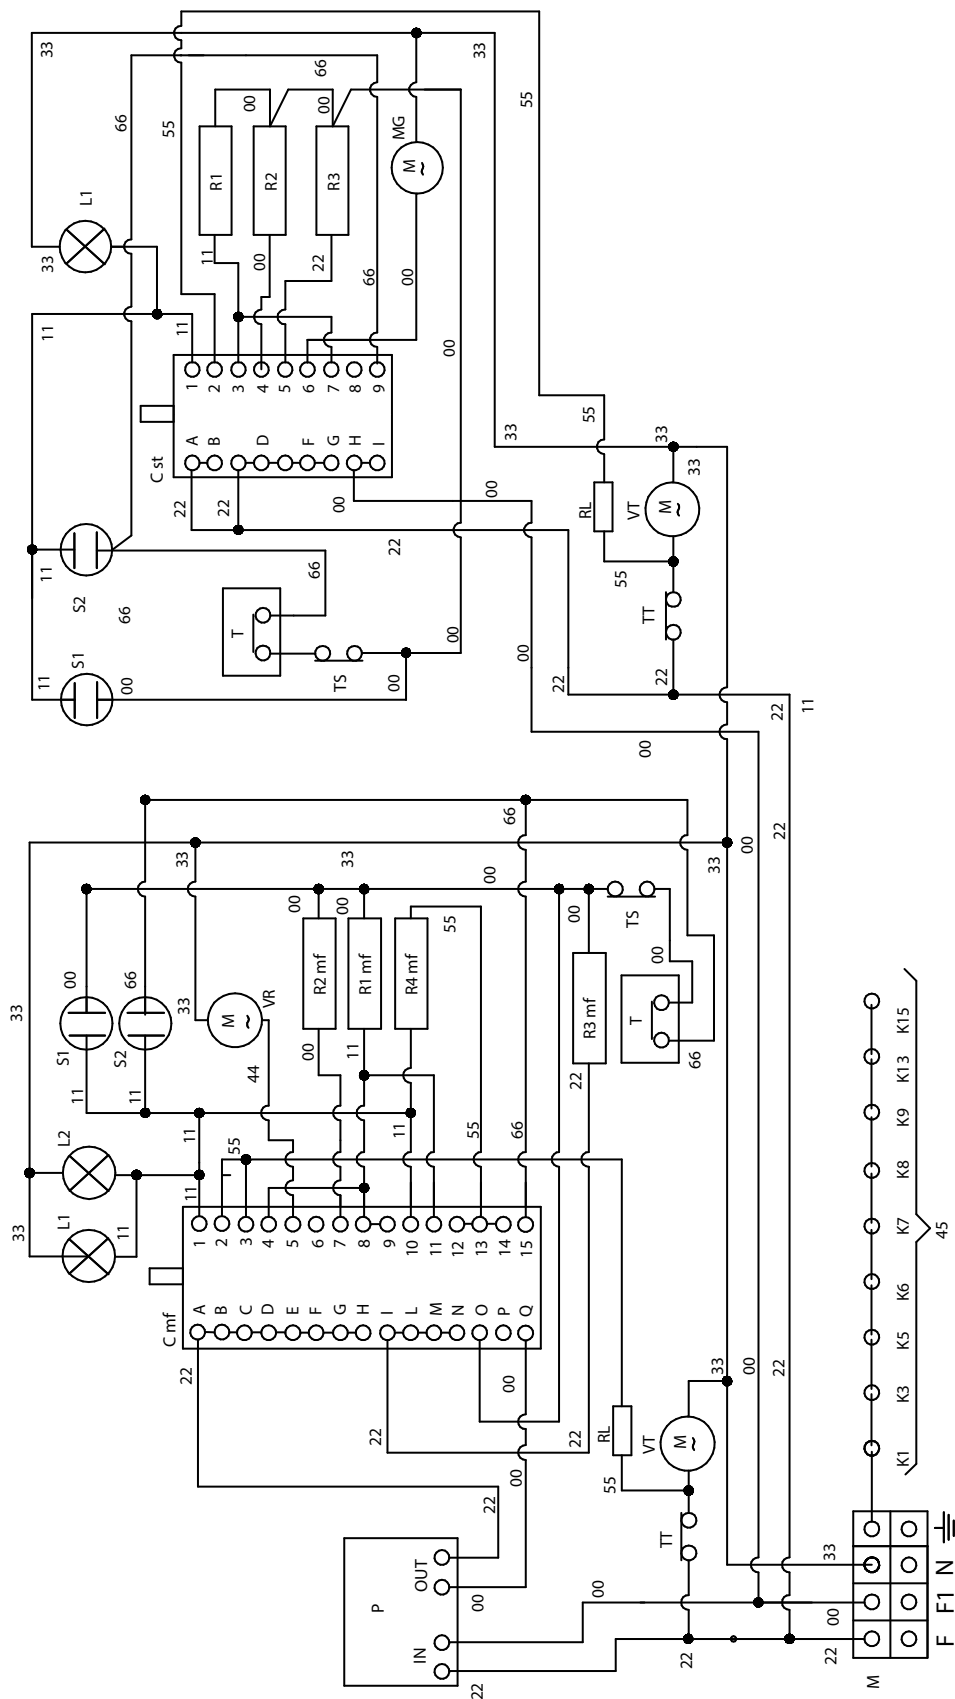

Live,
Cook,
Love.

ilve.com

ILVE S.p.A Via Antoniana, 100 — 35011 — Campodarsego (PD) Italy
T. +39 049 9200990 / Email: mail@ilve.com

ref. EI33960440000 25/2022